

CONNECT MODULE LOCAL OPERATION

The FloLogic System's Gateway Connect Module offers basic local notification and device operation. See the below diagram for functionality of each button and light.


Settings changes and advanced features must be accessed by an app user.

Light Functions

- Solid Green – Connected to through Gateway to Internet
- Solid Blue – Establishing secure cloud connection
- Blinking Red – Sync mode; ready to pair with Gateway
- Solid Red – Attempting to connect to Gateway
- Solid White – Confirming internet connection
- Blinking Yellow - Not paired to Gateway or online

- Solid Green – Home mode
- Solid Yellow – Away mode
- Blinking Red – Automatic shutoff (due to Home or Away flow time violation or external input)
- Solid Red – Manual water shutoff by app user or Connect Module
- Fast Blinking Green or Yellow – Override mode, revert to Home/Away
- Slow Blinking Green or Yellow – Bypass mode revert to Home/Away
- Blinking Blue – Communication error
- Orange - System down, not reporting mode status
- OFF (no light) – Disable mode (no monitoring)

- Solid Green – No flow detected
- Slow Blinking Blue – Flow detected below flow sensitivity setting (not time monitored)
- Fast Blinking Blue - Flow detected above flow sensitivity setting, but below 48 oz/min (monitored)
- Solid Blue – Flow high flow above 48 oz/min (monitored)
- OFF (no light) – System Disabled

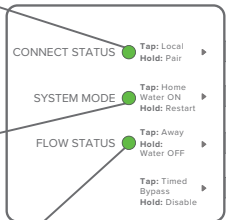

Button Functions

Tap = push button quickly
Hold = push/hold 2 seconds

- Tap for local Bluetooth access (future feature)
- Hold to provision online via Gateway Module

- Tap for Home Mode flow time allowance and to turn water on
- Hold to restart the FloLogic Valve/System

- Tap for Away Mode flow time allowance
- Hold for Water Off Mode

- Tap for Bypass Mode, suspending flow monitoring for a timed period
- Hold for Disable Mode to indefinitely ignore flow monitoring